

INSTALLATION INSTRUCTIONS

T9 CIRCLE LAMPS - LED SERIES - ANALOG DIMMING

REMOVING EXISTING SYSTEM

- Disconnect power to fixture.
- Remove existing lamps and properly recycle.
- Remove any existing ballast and properly recycle.



INSTALLING LED LAMPS (see figure A for wiring diagram)

- Lamp supplied with a G10Q lamp holder.
- Wire G10Q lamp holder to power source. (Fig.A)
- Insert Neptun T9 lamp into existing fixture.
- Plug G10Q lamp holder into Neptun T9
- Resupply power to fixture.

(Figure A)

LED WIRING

120 VAC (POWER SOURCE)
Compatible with Analog/Triac
Dimming Systems.

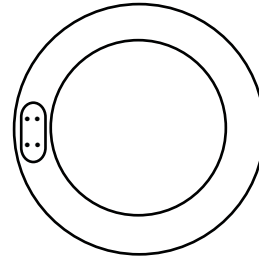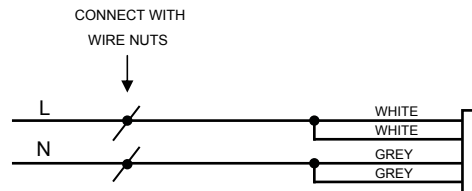

G10Q lamp holder

NEPTUN Light, Inc.
Questions and Comments:
service@neptunlight.com
Toll-Free: 1-888-735-8330

© Copyright 2009
NEPTUN Light, Inc.

CAUTION!

DISCONNECT POWER SUPPLY BEFORE INSTALLATION OR MAINTENANCE.
INSTALLATION OF THIS PRODUCT SHOULD BE DONE BY A FULLY QUALIFIED AND
LICENSED ELECTRICIAN OR TECHNICIAN.

INSTALLATION INSTRUCTIONS

T9 CIRCLE LAMPS - LED SERIES - ANALOG DIMMING

REMOVING EXISTING SYSTEM

- Disconnect power to fixture.
- Remove existing lamps and properly recycle.
- Remove any existing ballast and properly recycle.



INSTALLING LED LAMPS (see figure A for wiring diagram)

- Lamp supplied with a G10Q lamp holder.
- Wire G10Q lamp holder to power source. (Fig.A)
- Insert Neptun T9 lamp into existing fixture.
- Plug G10Q lamp holder into Neptun T9
- Resupply power to fixture.

(Figure A)

LED WIRING

120 VAC (POWER SOURCE)
Compatible with Analog/Triac
Dimming Systems.

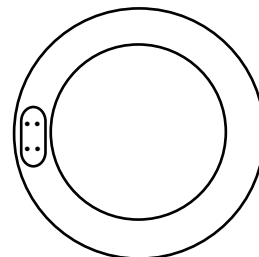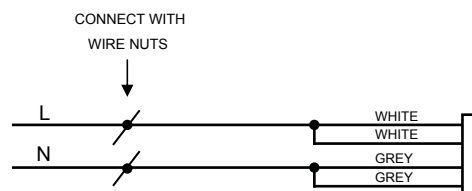

G10Q lamp holder

CAUTION!

DISCONNECT POWER SUPPLY BEFORE INSTALLATION OR MAINTENANCE.
INSTALLATION OF THIS PRODUCT SHOULD BE DONE BY A FULLY QUALIFIED AND
LICENSED ELECTRICIAN OR TECHNICIAN.

© Copyright 2009
NEPTUN Light, Inc.